



Keys

n Electronic key



Smart access system with push-button start
(→P.14, 29)

*:If equipped

n Mechanical key



- 1 Locks and unlocks the doors
- 1 Opens the trunk
- 1 Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

n Wireless remote control



- 1 Press: locks all doors
- 2 Press once: unlocks the driver's door
Press twice: unlocks all doors
Press and hold: opens the windows and moon roof*
- 3 Press and hold: opens the trunk
- 4 Press and hold: sounds the alarm
(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

*:If equipped

Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter or exit the vehicle or start the hybrid system by simply carrying the electronic key in your pocket or bag.

n Entering the vehicle



To unlock the vehicle, simply grasp one of the door handles.

n Exiting the vehicle



To lock the vehicle, press the lock button on one of the door handles.
To close the windows and the moon roof*, press and hold the lock button.

*:If equipped

n Opening the trunk



To open the trunk, press the trunk release button.

The trunk lid automatically opens fully.

For details on what to do when the electronic key does not operate properly, see page 72.



Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

n Immobilizer system



The immobilizer system prevents the hybrid system from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The indicator light flashes to indicate that the system is set.

n Alarm

The system sounds the alarm and flashes lights when an attempt to steal the vehicle is detected.

To set the alarm: close the doors, trunk and hood, and lock all doors. The indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

To deactivate or stop the alarm: start the hybrid system, or unlock the doors or trunk.

n Steering lock



The steering wheel locks when the “POWER” switch is turned to “OFF” mode and the driver’s door is opened.

When the steering lock cannot be released, the green indicator light on the “POWER” switch will flash and a message will be shown on the multi-information display. To release it, press the “POWER” switch while gently turning the wheel left or right.